



Transformer Assembly Instructions


Single seater base view (1S1V)

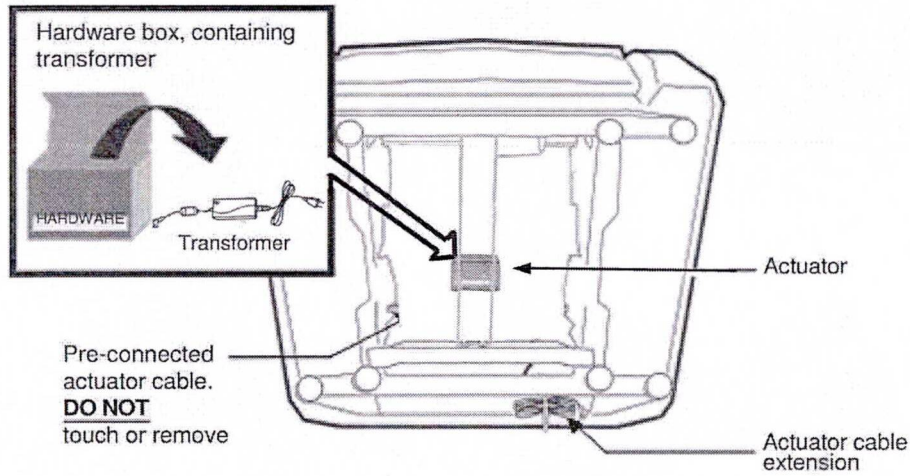


Three seater base view (3S2V)

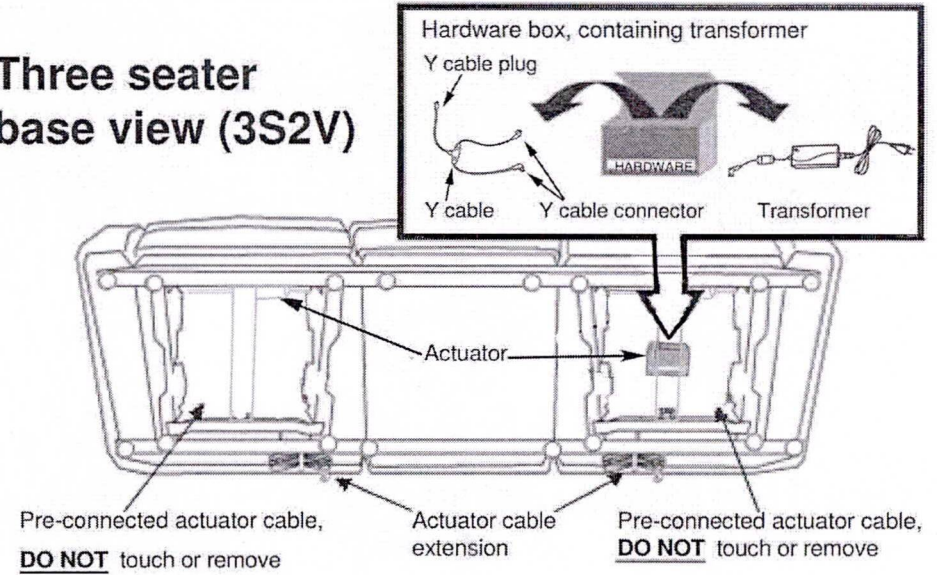

Actuator cable setup guide

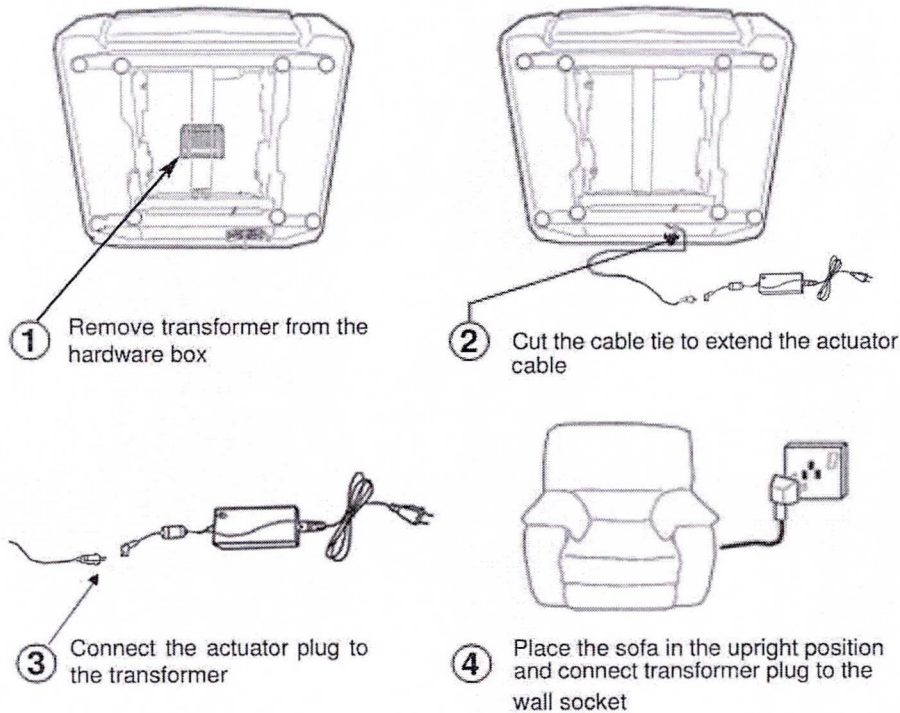


Actuator cable setup guide

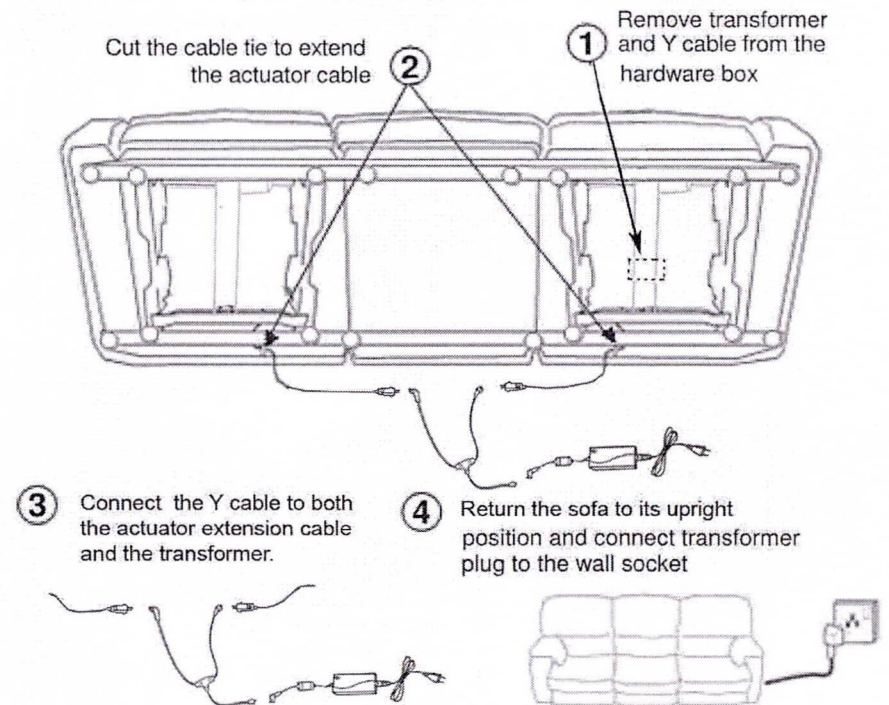


Operating Instructions

Type 1 : Push switch

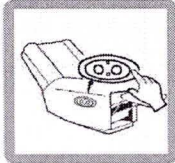

To recline
Press the front button found on the side of the chair. The footrest will extend out. Keep fingers on the button until it reaches the desired position.

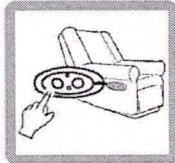


To retract
Press the rear button found on the side of the chair until the footrest returns to the closed position.

Type 2 : Lever Release




To extend footrest
Pull lever on the side of the chair. The lever will activate the mechanism and extend the footrest.

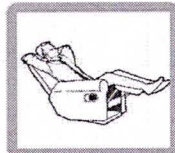


To recline
With footrest extended, lean back. The back is counter-balanced and requires only minimum pressure to recline smoothly into your desired position. Place both hands behind the head to assist the movement.



To retract
Sit up and the recline will return to its original position.

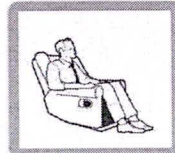


To return footrest
Move your body weight forward and press down with your legs until the footrest returns to the closed position. It will be locked in this position.

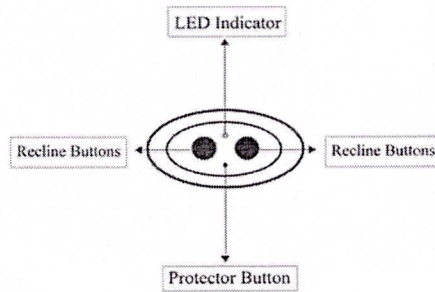

Be careful:

Users may activate/deactivate the protection button by using a pen. Ensure that the protection button is deactivated prior to use. The LED indicator will emit a green light when the power recliner unit is plugged to a power point. The LED indicator will emit a red LED light when the recline buttons are activated. The LED indicator will not emit any green/red light when the power recliner unit is unplugged from the power supply.


Reclining Sofa : Safety Instructions

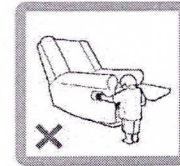


Do not allow children and pets to play on mechanised furniture and extended footrest. Close supervision is necessary when this furniture is used by, on or near children, pets, invalids, or disabled person.



Ensure that no persons are near the furniture when it is in operation.

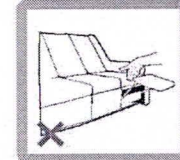


Never drop or insert any object into any openings. Keep hands away!

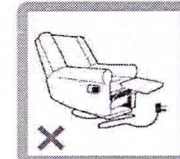


Do not place sofa over the power cords or cause power cords to be entangled with furniture.



Do not allow liquids to come in contact with any electric components.

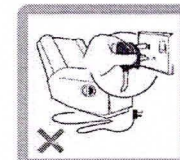

Switch off and unplug from outlet when not in use, and before putting on or taking off parts.

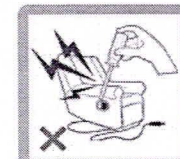

Never operate the electric operated furniture if it has a damaged cord or plug, if it is not working properly, if it has been damaged or damaged by water. Contact your supplier for examination and repair. Electric components should not be tampered with.